FOOT VALVES





Foot valves are designed to be installed vertically at the end of the suction pipes of centrifugal and pneumatic pumps. They function as check valves that prevent the suction hose from emptying so that the pumps remain always primed.

	0005	0175
MATERIAL	CODE	SIZE
PP	VALVFN000038APP	3/8"
PVDF	VALVFN000038AFV	
PP	VALVFN000012APP	1/2"
PVDF	VALVFN000012AFV	
РР	VALVFN000100APP	· 1"
PVDF	VALVFN000100AFV	
РР	VALVFN000114APP	1" 1/4
PVDF	VALVFN000114AFV	
РР	VALVFN000112APP	1" 1/2
PVDF	VALVFN000112AFV	
РР	VALVFN000200APP	- 2"
PVDF	VALVFN000200AFV	
РР	VALVFN000300APP	- 3"
PVDF	VALVFN000300AFV	