

BOXER PUMP TRUCK



The truck is used to move the pump.
The pump is blocked with the fixing holes.

PUMP TYPE	CODE
BOXER 50 MINIBOXER BOXER 81 BOXER 90 BOXER 100	CARRELLO 01
BOXER 150 BOXER 251 BOXER 252	CARRELLO 02